


FRONT RUNNER

FORD RANGER T6.2 (2022-CURRENT)/VW AMAROK (2023-CURRENT)
DOUBLE CAB SLIMSPORT RACK WIND FAIRING

ENG

RRAC313

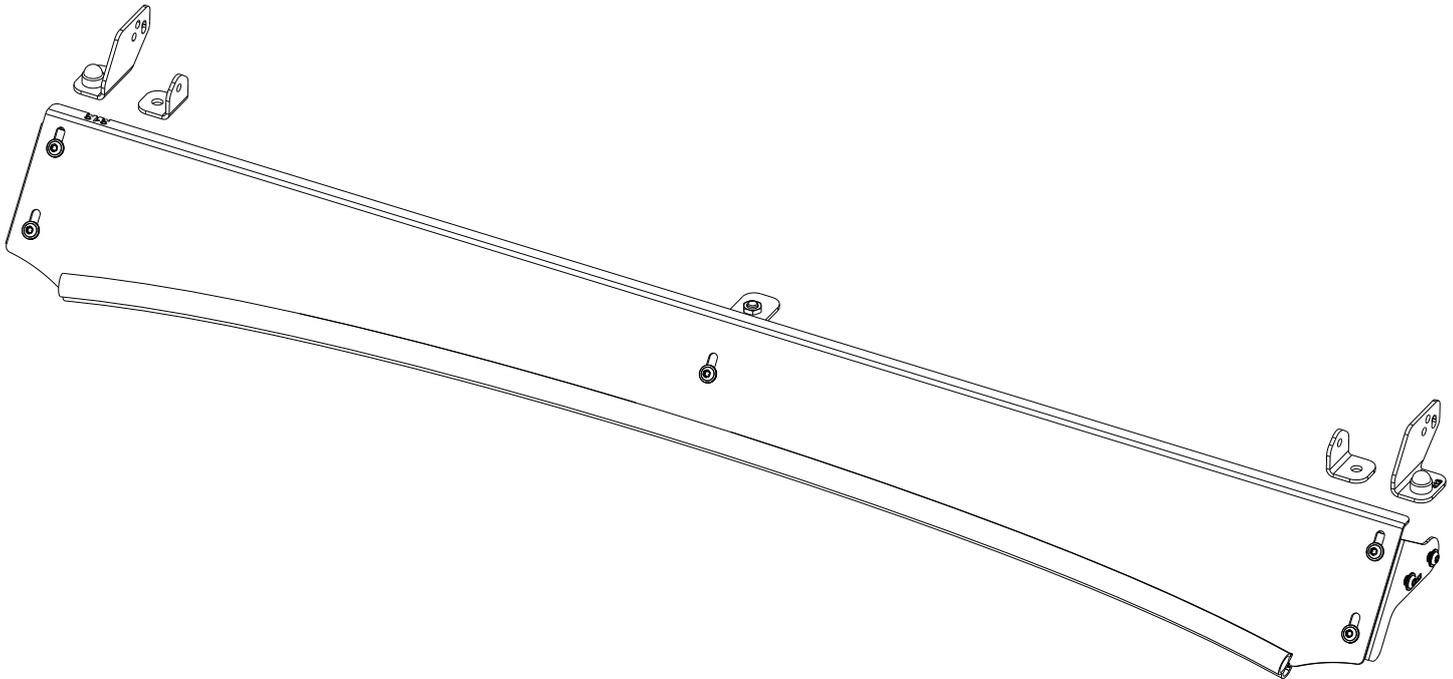

READ ME !

Thank you for purchasing a Front Runner Ford Ranger T6.2 (2022-Current) / VW Amarok (2023-Current) Double Cab Slimsport Rack Wind Fairing.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.



1 GET ORGANIZED

IN THE BOX

1	1 X	Standard Wind Fairing
2	1 X	Wind Fairing Support Bracket LH
3	1 X	Wind Fairing Support Bracket RH
4	1 X	Wind Fairing Mid Support Bracket
5	1 X	Light Bar Bracket High Profile LH
6	1 X	Light Bar Bracket High Profile RH
7	2 X	Light Bar Bracket Low Profile
8	9 X	M6 x 16 Flange Button Head Bolt
9	3 X	M8 x 16 Hex Bolt
10	3 X	M8 Nyloc Nut
11	3 X	M8 Nut Cap
12	1 X	Rubber Seal 1043mm Long

TOOLS NEEDED


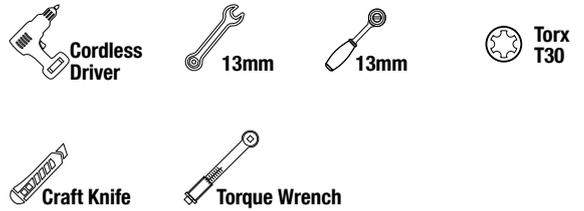



FIGURE 1.1

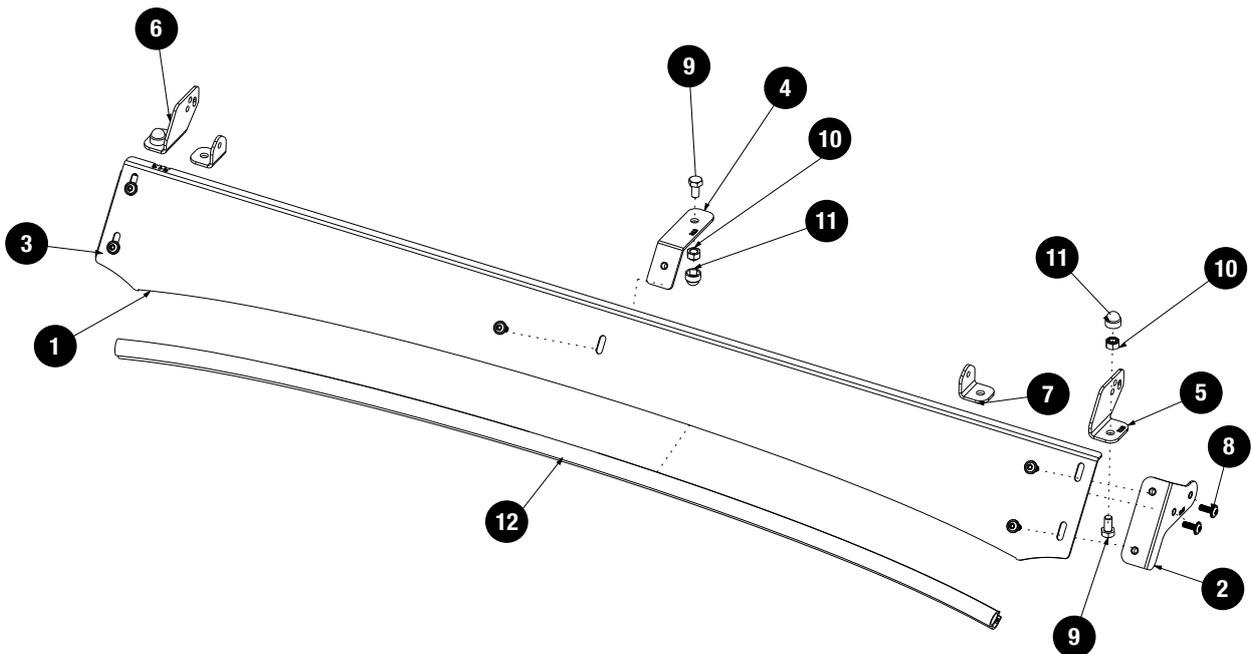

2

FIT AND SECURE

2.1

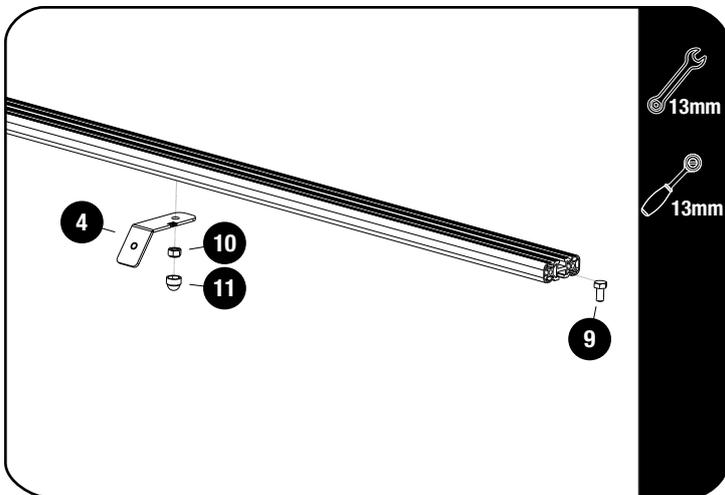

Start by Removing the Front slat of the Roof Rack.

Slide one M8 x 16 Hex Head Bolt (Item 9) into the T-slot of the front slat. Center the mid support bracket (Item 4) in the middle of the slat using a tape measure and secure using M8 Nyloc Nut (Item 10). Fully Tighten


Place a M8 Nut Cap (Item 11) over the Nyloc Nut.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

2.2

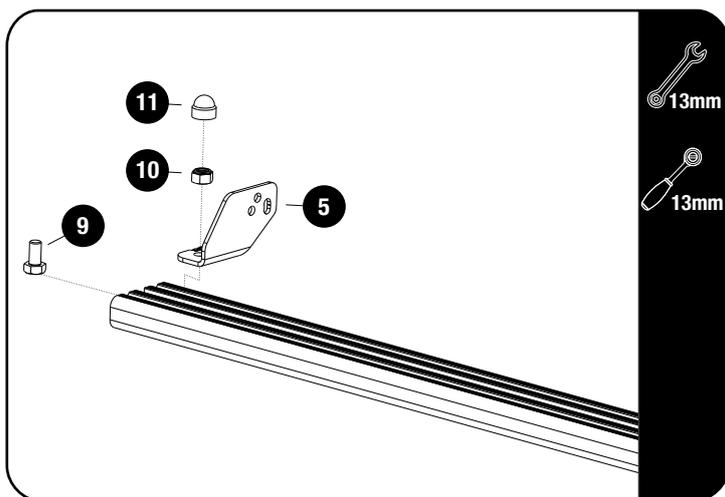

Fit the Light Bar Bracket 01 LH / RH (Item 5) for the 40" Light Bar, using M8 x 16 Hex Bolt & M8 Nyloc Nut (Items 9 & 10). Fit the light bar and center it on the slat before fully tightening the brackets.


Place M8 Nut Caps (Item 11) over all M8 Nyloc Nuts.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

2.3

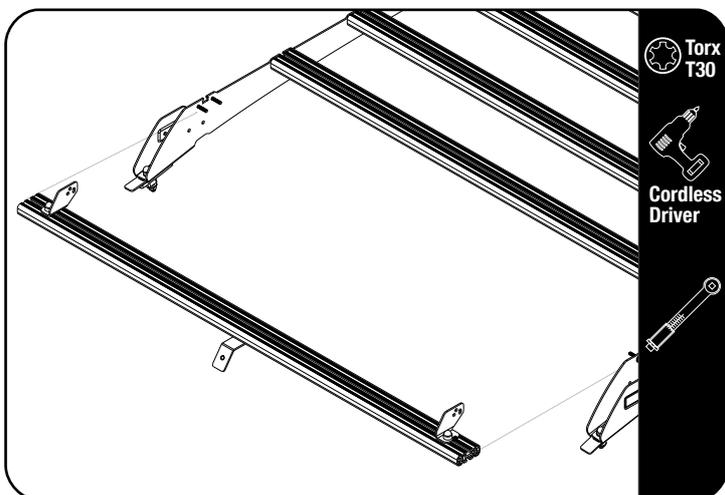

Secure assembly 2.2 to the front two top holes on the foot rails using the fasteners supplied with KSFR005.




Tightening Torque 8-10Nm / 5.9 ft lb - 7.38 ft lb.

2

FIT AND SECURE

2.4

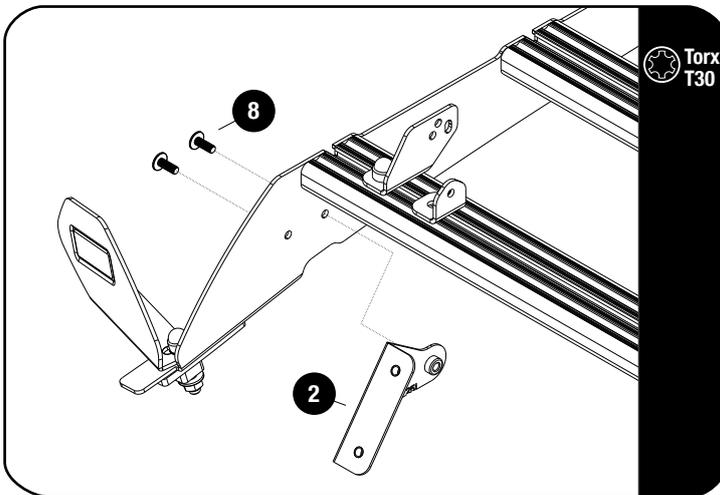


Loosen the finisher plate and swing out the way for access.

Secure the Wind Fairing Side supports LH / RH (Item 2) to the foot rails bottom holes as shown using M6 x 16 Flange Button Heads (Item 8).



Tightening Torque 8-10Nm / 5.9 ft lb - 7.38 ft lb.

2.5

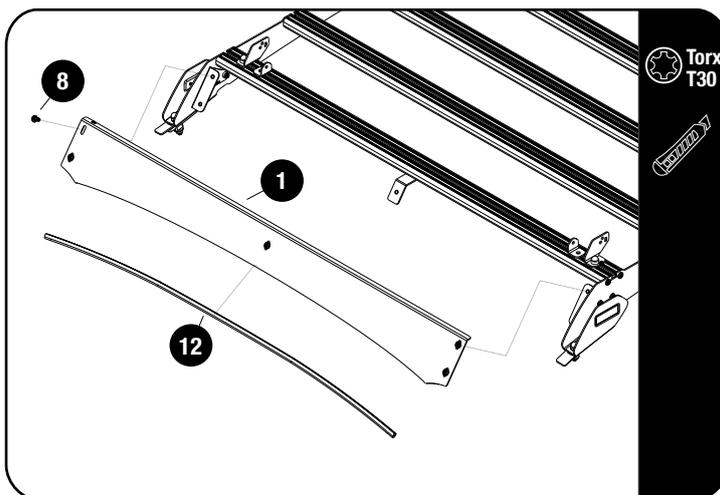

Fit the Wind Fairing Rubber (Item 12) to the Wind Fairing (Item 1). Using the notched section as a guide, trim if needed.

Secure the Wind Fairing assembly to the rack assembly, using M6 x 16 Flange Button Heads (Item 8) and fully tighten all fasteners.

Reposition the dimple plates and fully tighten.



Tightening Torque 8-10Nm / 5.9 ft lb - 7.38 ft lb.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

