

START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

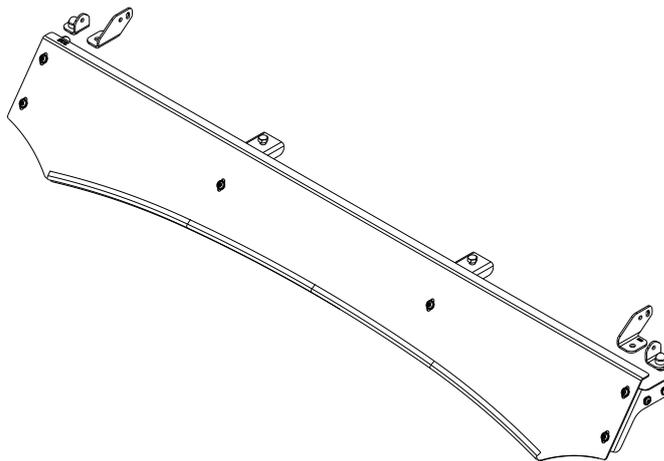

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.



1 GET ORGANIZED

IN THE BOX

1	1 X	Wind Fairing
2	1 X	Main Bracket LHS
3	1 X	Main Bracket RHS
4	2 X	Center Brackets
5	10 X	M6 x 16 Flanged Button Head Bolts
6	4 X	M8 x 16 Hex Head Screws
7	4 X	M8 Nyloc Nut
8	1 X	Wind Fairing Rubber
9	2 X	Small Light Bar Bracket
10	1 X	Large Light Bar Bracket LHS
11	1 X	Large Light Bar Bracket RHS
12	4 X	M8 Nut Cap

TOOLS NEEDED




Torx T30



13mm




Cordless Driver

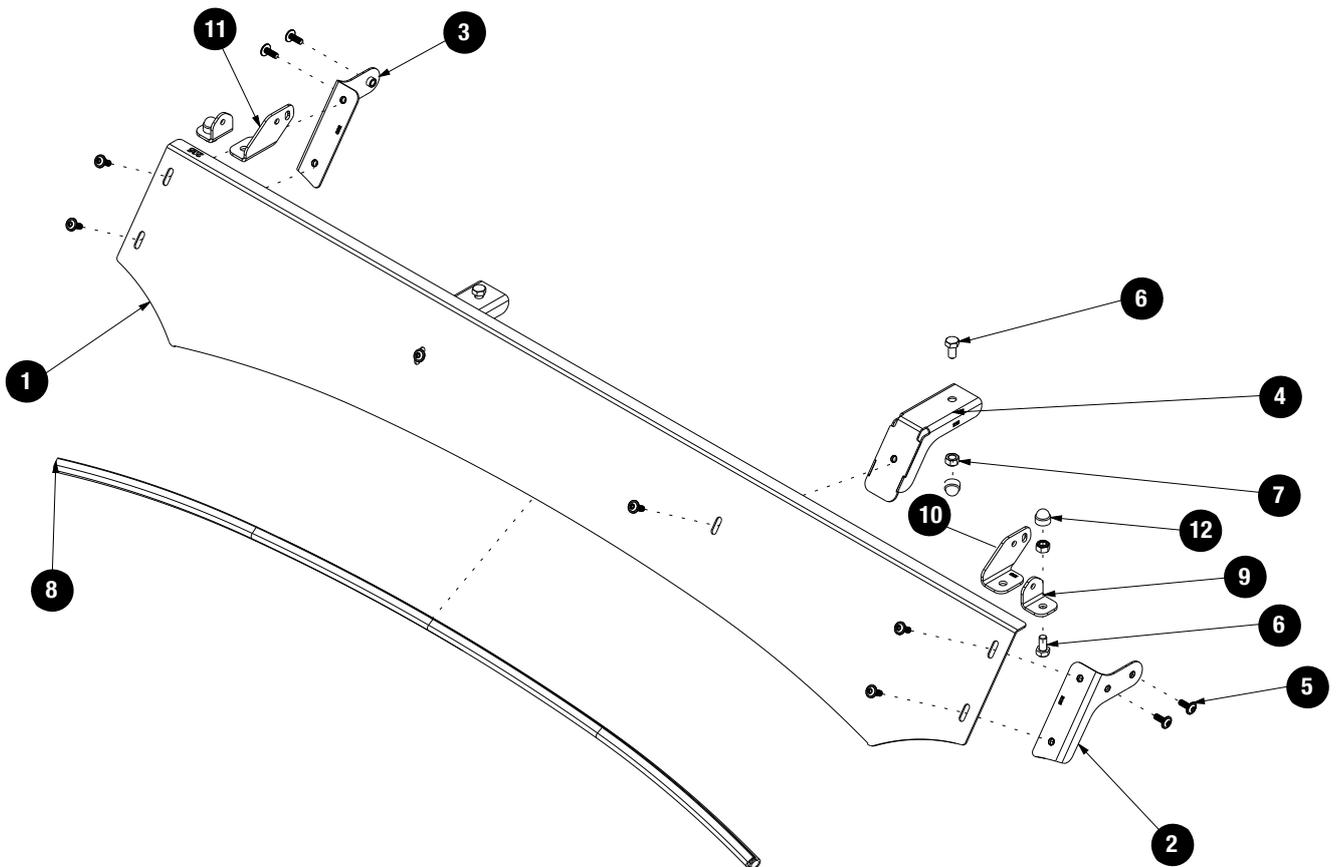

2


FIT AND SECURE

2.1

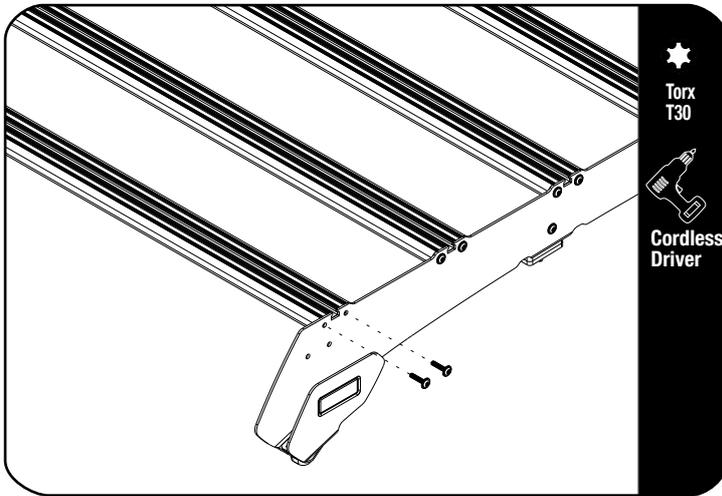

Start by removing the front slat (if already installed) using a T30 torx bit.

2.2

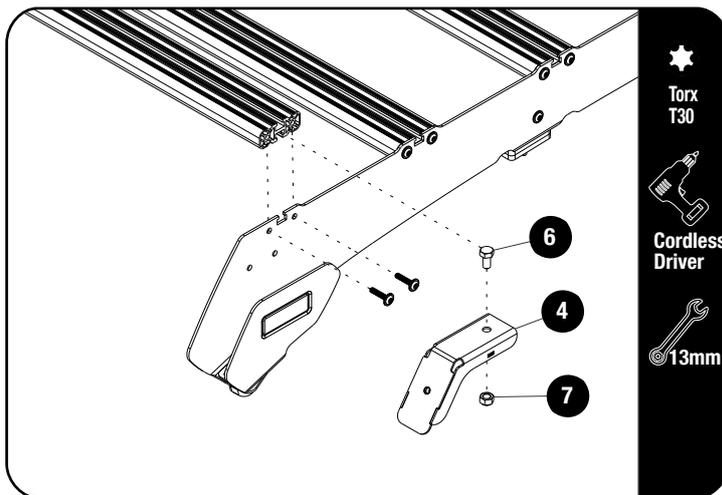


Slide two M8 x 16 Hex Bolt (Item 6) into the bottom T-Slot as shown.

Fit the two Wind Fairing Support Brackets (Item 4) using the two M8 Nyloc Nuts (Item 7) but do not fully tighten.

Using the Wind Fairing as reference align and position the two Support Brackets.

Refit the front slat with the Self Forming Screws you removed in step 2.1.

2.3

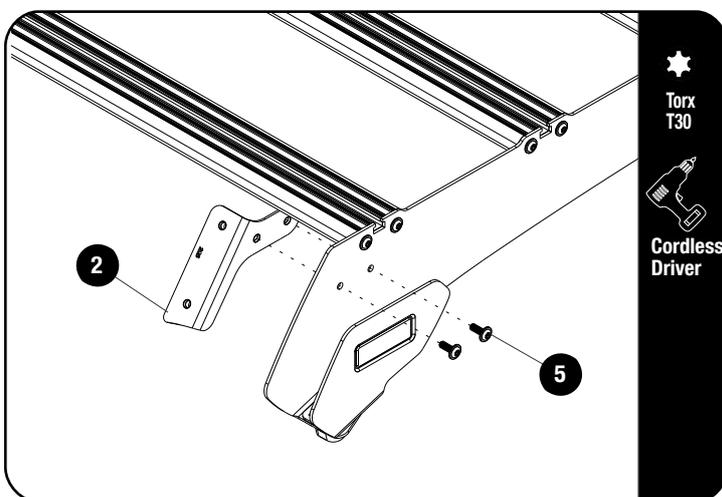

Assemble the Wind Fairing Side Brackets (Item 2) Left and Right side with the M6 x 16 Button Head Flange Bolts (Item 5) as shown.


Tightening Torque:
M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

Tightening Torque:
M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2

FIT AND SECURE

2.4

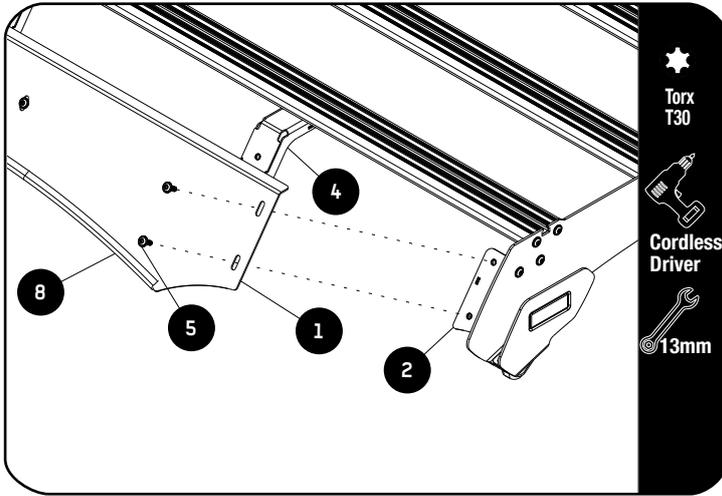

Fit the Wind Fairing Rubber Trim to the Wind Fairing (Item 1 & 8)

Assemble the Wind Fairing (Item 1) to the Side Brackets (Item 2) and Support Brackets (Item 4) with the M6 x 16 Button Head Flange Bolts (Item 5) using a T30 Torx Bit.


Now you can fully tighten the M8 Nyloc Nuts that mount the Support Brackets fitted in step 2.2.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.5

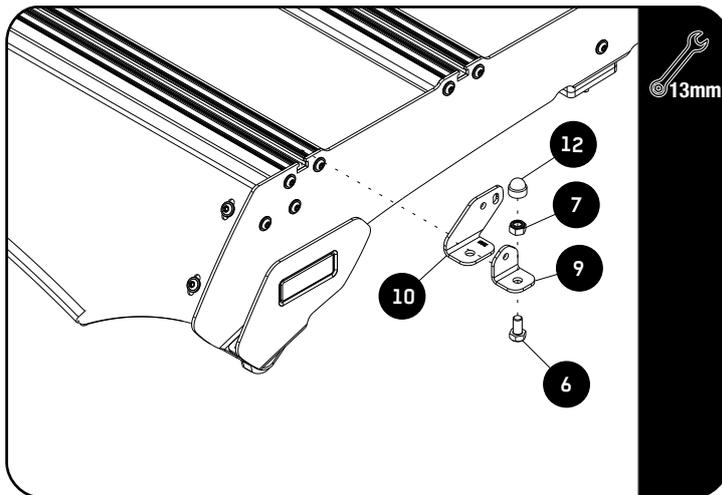

If you would like to fit a Light Bar slide the M8 x 20 Hex Head Bolts (Item 6) into the front slat and loosely assemble the brackets, either the Small Light Bar Brackets (Item 9) or the Large Light Bar Brackets (Item 10).

Use the Light Bar to position the mounts and then fully tighten.

Place the M8 Nut Caps over the M8 Nyloc Nut (Item 12)



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

3

COMPLETION

3.1

Congratulations! You did it. Take a step back and admire your work!



4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    